

# CLEARCALL 70 USER GUIDE



## FREE 1-YEAR WARRANTY

1

Thank you for purchasing the Back Bay ClearCall 70 headphones! You are covered by our 1-Year Warranty.

Register for your free warranty at:  
[www.backbaybrand.com/warranty](http://www.backbaybrand.com/warranty)

If you have any issues, please feel free to email: [support@backbaybrand.com](mailto:support@backbaybrand.com)  
Our team will get back to you as fast as humanly possible!

 


WARRANTY

## IN THE BOX



Headphones

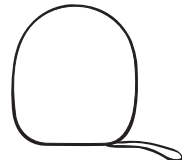

Protective Case




Removable Boom Mic



USB-C Charging Cable

## COMPONENTS

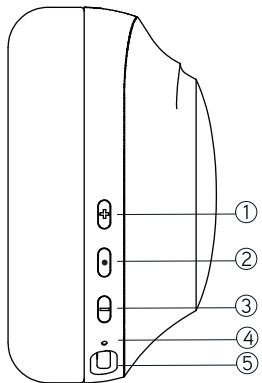 


Item	Function
1	Volume Up
2	Command Button
3	Volume Down
4	LED Indicator
5	USB-C Charge Port
6	Boom Microphone
7	Built-in Microphone

## CHARGING

 
The light will flash red when the battery is low

The light will be solid red while charging

The light will turn off when fully charged


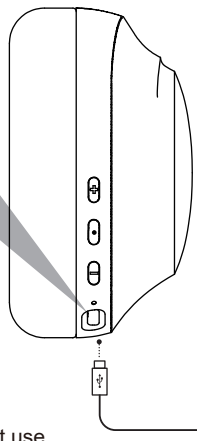


 Connect to computer or USB 5V 1A (or less) output device.

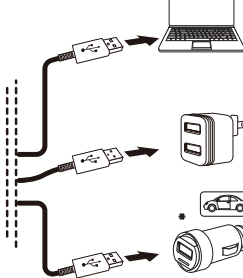

\*Use the included USB-C cable to charge  
\*Fully charge the headphones before the first use

## PAIRING

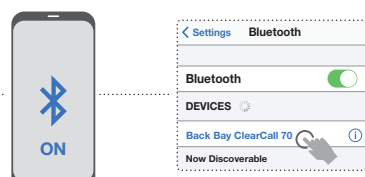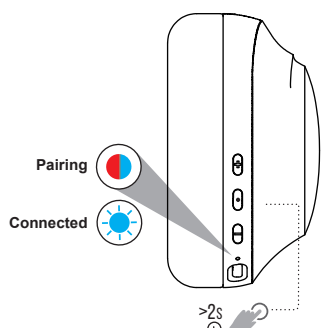  

Choose "Back Bay ClearCall 70" to connect


Press and hold the **middle button** for 2 seconds to power on and automatically enter pairing mode

To enter pairing mode again, power off and then hold the **middle button** for 5 seconds to power on a re-enter pairing mode

## CONTROLS

 - Press once to **increase volume**
- Press and hold to **skip forward**
- Press once to **play/pause or answer/end a phone call**
- Press twice to **activate Siri or other voice control software**
- Press and hold for 2 sec to **reject incoming calls**
- Press and hold to **power ON or OFF**
- Press once to **decrease volume**
- Press and hold to **skip back**

### 3 SOUND MODES

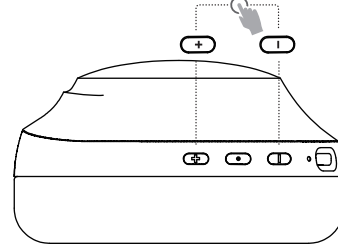

Press +/- buttons **simultaneously** to switch between sound modes

- 1 Back Bay Signature Sound**  
The sound that we are known for! Refined bass, relaxed midrange, and crisp highs.
- 2 Bass Boost**  
If you want booming bass without any harshness, you are in the right place.
- 3 Vocal Boost**  
Great for calls! Enhance vocal clarity without any boominess.

## CONNECT TO COMPUTER

**Windows®**  
Put your headphone into **pairing mode**. Then, in Windows, search for "Bluetooth". Select "**Bluetooth and other devices settings**". Select "**Add Bluetooth or other device**". Select "**Bluetooth**" and choose "**Back Bay ClearCall 70**". Then click "**Done**".

To check that everything is configured correctly, please open **Sound** setting and check the following:

**Output**  
Choose your output device - should be set to **Headphones (Back Bay ClearCall 70 stereo)**

**Input**  
Choose your input device - should be set to **Headset (Back Bay ClearCall 70 Hands-free AG Audio)**

 
 
**Mac®**  
Put your headphone into **pairing mode**. On your Mac, please go to **System Preferences** and then **Bluetooth**.

Select "**Back Bay ClearCall 70**" from the list of devices by clicking "**connect**".

To check that everything is configured correctly, please go to **Sound**

Output should be set to **Back Bay ClearCall 70**  
Input should be set to **Back Bay ClearCall 70**

## CONNECT 2 DEVICES AT THE SAME TIME

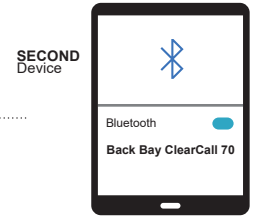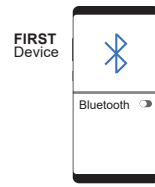

- 1** Once your **first device** is connected, please turn off Bluetooth on that device. The "Back Bay ClearCall 70" will then go back into pairing mode.
- 2** On your **second device**, go to Bluetooth settings and select the "**Back Bay ClearCall 70**" to pair.
- 3** On your first device, go back to your Bluetooth setting, turn **Bluetooth** on again, and select "**Back Bay ClearCall 70**" to connect. A call may come through from either device. If it is a call from your phone, you can answer it on your headphones by pressing the middle button. If it is a call from your computer, you will need to answer on your computer and it will come through your headphones.

\*When the headphones power on, they will automatically connect to the last connected device. To reconnect the 2nd device, please manually connect to "Back Bay ClearCall 70" from that device.

## BOOM MICROPHONE


### Boom Microphone

To enhance the microphone quality for calls, you can use the included boom microphone by plugging it into the USB-C charging port.

### Foam Sleeve



To increase clarity and remove any harshness in your voice, please use the included foam mic sleeve.

When you unplug the boom microphone, the audio input will default back to the built-in microphone.

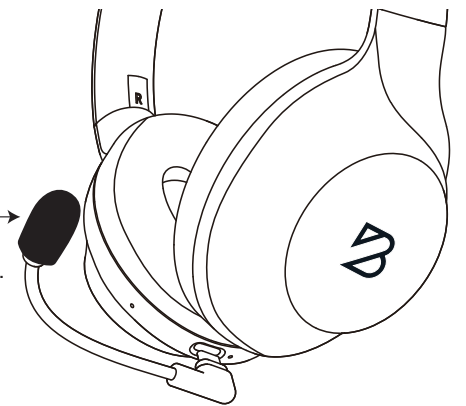

## FACTORY RESET

Please make sure you forget "Back Bay ClearCall 70" from your Bluetooth device settings before resetting.

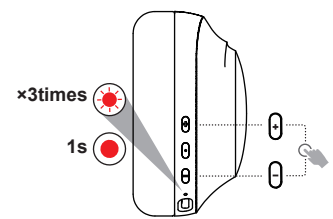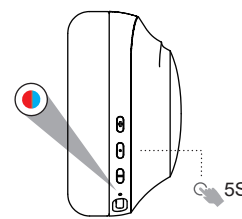

- 1** When Power is off, press and hold the power button for 5 seconds until the light flashes **blue and red**.
- 2** Then, hold +/- buttons simultaneously for 10 seconds until you see the **red light flash 3 times and then turn solid for 1 second**. The headphones will power **OFF** automatically.

### FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID : 2A9PL-CC70

Please read this manual carefully before use.

### Warning

To prevent possible hearing damage, do not listen at high volume levels for long periods. For your own safety, please be aware of your surroundings when using these headphones.

### Safety Warnings

Do not place near any open flames. Dispose of batteries responsibly and be aware of the environmental effects of battery disposal. Do not expose batteries installed to excessive heat.