



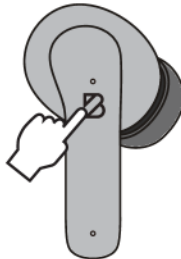









<div>SLIM 20</div> <div></div> <div>USER MANUAL</div>	<div>1-Year Warranty</div> <div>Thank you for purchasing the Slim 20 wireless earbuds</div> <div>You are covered by our 1-Year Warranty</div> <div>Register for your free warranty at: www.backbaybrand.com/warranty</div> <div></div> <div>How to Power On/Off</div> <ul style="list-style-type: none">To power on, remove the earbuds from the case <u>or</u> hold the LED light area on each earbud for 3 secondsTo power off, place the earbuds in the case and close the case <u>or</u> pause music then hold the LED light for 6 secIf the case is totally out of battery, the earbuds won't turn off automatically	<div>Pairing for the First Time</div> <ol style="list-style-type: none">Remove any protective plastic from the bottom of the earbudsPlace the earbuds in the charging case and close the lidOpen the lid and remove both earbuds from the charging case. They will automatically turn on and connect to each otherGo to the Bluetooth menu on your device and select "Back Bay Slim 20"If your phone shows a Bluetooth Pairing Request, press "Pair" <div></div>	<div>Fixing a Connection Issue</div> <ol style="list-style-type: none">In your phone's Bluetooth settings, find "Back Bay Slim 20" and click "Forget this Device" or "Unpair"With the earbuds in the case, press and hold the button in between the earbuds for 8 full seconds until you see a light flash on the earbudsClose the case for 5 secondsOpen the case and remove the earbuds. You should see "Back Bay Slim 20" in your phone's Bluetooth menu <div></div> <div>If you don't see it in your Bluetooth menu, turn your phone's Bluetooth off and on again</div>	<div>Bass Mode</div> <div>To turn Bass Mode on, triple-tap the LED light area on the right earbud.</div> <div>To turn Bass Mode off, triple-tap the LED light area on the right earbud again</div> <div></div>	<div>Controls</div> <div><div>Left Earbud</div><div></div><div>Volume Down Tap Left Bud Previous Song Hold Left Bud for 2 Sec Voice Assistant Triple-Tap Left Bud</div></div> <div><div>Right Earbud</div><div></div><div>Volume Up Tap Right Bud Next Song Hold Right Bud for 2 Sec Bass Mode On/Off Triple-Tap Right Bud</div></div> <div>Pause/Play Double-Tap Either Bud Once</div> <div>Power On/Off Press and Hold Buds for 6 Seconds <i>*Music must be paused to power off</i></div> <div>Phone Calls</div> <div>Answer Call Tap Either Bud Once</div> <div>End Call Hold Either Bud</div> <div>Reject Incoming Call Hold Either Bud</div>	<div>Positioning</div> <div>Place the earbud in your ear with the "B" logo facing out. Rotate the earbud until you find a comfortable position</div> <div></div> <div>Choose the Right Ear-Tip</div> <div>GREAT FIT = GREAT BASS</div> <div></div> <div>If you are having trouble putting on the tips, go to the site below for help: backbaybrand.com/eartips</div>								
<div>How to Charge</div> <div>Charging the Earbuds</div> <ul style="list-style-type: none">Simply place the earbuds in the charging case and close the case (Make sure they are not wet)When the earbuds are charging, the LED light on the front of the case will shine whiteWhen the earbuds are fully charged, the LED light on the front of the case will turn offThe case will recharge the earbuds 5 full times <div>Charging the Case</div> <ul style="list-style-type: none">Locate the USB-C cable included in the accessory box, and plug it into the USB-C port on the case <div>Do not use a charger that exceeds 5V 1A. Higher voltage may damage the battery.</div>	<div>Charging Status</div> <div>The LED lights on the inside of the case will shine to show the battery status when you plug in the case or place the earbuds in the case</div> <table><tr><td>Battery 100%-75%</td><td>4 Lights</td></tr><tr><td>Battery 75%-50%</td><td>3 Lights</td></tr><tr><td>Battery 50%-25%</td><td>2 Lights</td></tr><tr><td>Battery 25%-0%</td><td>1 Light</td></tr></table> <div></div> <div>LED Lights</div>	Battery 100%-75%	4 Lights	Battery 75%-50%	3 Lights	Battery 50%-25%	2 Lights	Battery 25%-0%	1 Light	<div>Helpful Charging Tips</div> <ul style="list-style-type: none">If the earbuds don't turn off when you put them in the case and close the case, it means the case is fully out of battery and needs to be recharged.You can leave the charging case plugged in as long as you'd like and it won't over-charge. We have designed the electronics to prevent over-charging. <div></div>	<div>Specifications</div> <ul style="list-style-type: none">Bluetooth Version: 5.3Profiles Supported: A2DP, AVCTP, AVDTP, AVRCP, HFP, SPP, SMP, ATT, GAP, GATT, RFCOMM, SDPSupports Cellphone Voice AssistantsWireless Range: 10mBattery Capacity:<ul style="list-style-type: none">Earphones: 30 mAhDock: 500 mAhEarphone Playtime: 5.5 HoursTotal Playtime with Charging Case: 33 HoursCharging Time: About 2 HoursFrequency Range: 20 Hz – 20,000 Hz	<div>FCC Information</div> <div>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</div> <div>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</div> <div>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</div> <div>-Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.</div> <div>FCC ID : 2BC3D-GHOSTBUDS</div>	<div>Please read this manual carefully before use.</div> <div>Warning</div> <div>To prevent possible hearing damage, do not listen at high volume levels for long periods. For your own safety, please be aware of your surroundings when using these headphones.</div> <div>Safety Warnings</div> <div>Do not place near any open flames. Dispose of batteries responsibly and be aware of the environmental effects of battery disposal. Do not expose batteries installed to excessive heat.</div>	<div> SUPPORT@BACKBAYBRAND.COM</div> <div>WWW.BACKBAYBRAND.COM</div>
Battery 100%-75%	4 Lights													
Battery 75%-50%	3 Lights													
Battery 50%-25%	2 Lights													
Battery 25%-0%	1 Light													